

## Register your LyngBox and save settings

To be able to create and manage favourite channel lists on [www.lyngbox.com](http://www.lyngbox.com) you first need to register your LyngBox unique web user name and password in your “my page” profile. If you are already a LyngBox member, please log in to your “my page” area. If you do not have a “my page” profile on [www.lyngbox.com](http://www.lyngbox.com), please begin by creating your new account:

- 1) Click on “register”
- 2) Choose a desired user name
- 3) Submit a working email address
- 4) Choose a password
- 5) Confirm your chosen password
- 6) Read and accept the terms and conditions and press the “submit”-button
- 7) You will shortly receive an approval email. Click on the confirmation link in that email to finalize the registration process
- 8) Log in to your “my page” area

The first time you log in, you will end up in the “overview” screen of your “my page” area. The natural step from here is to make sure you register your LyngBox. Click on “settings” next to the “overview” link at the top of the page.

First you will be asked to enter some “basic” information about yourself. It’s important that you choose the same time zone here, as the time zone you have set in your LyngBox. Click the “submit” button when you are ready.

Second, click on the “lyngbox” link next to the “basic” link. You will be asked to enter your web user name and password. This information is found under “system information” in the “main menu” of the LyngBox. The web user consists of four numerical characters. The password is usually six characters long. Press the “submit”-button when you’re done. Your web user name becomes your “account number” and will always be listed under the “lyngbox” link.

## My Favourite Lists – *A brief explanation on what is what and how to manage.*

### Satellite position / drop-down menu

In the drop-down menu to the left you will find the satellite positions available with your configurations. The number, i.e. **19E**, is the orbital position of the satellite measured in degrees east (E) from the Greenwich meridian. Similarly, should your drop-down menu show a number, i.e. **30W**, this means that with your configurations (saved satellites) you are able to receive channels/programs positioned 30 degrees west (W) of the Greenwich meridian. All the channels available for a chosen satellite position will be listed in the left-hand column. The scrolling function to the right of the column lets you navigate up and down between the channels. If you know the name of a channel, use the numerical and alphabetical sorting function at the bottom of the channel column, to quickly locate what you are looking for.

On LyngSat Network - [www.lyngsat.com](http://www.lyngsat.com) – you can find out more about what satellite corresponds to what position and what the program content is – both free to air and encrypted channel information.

### **Change button**

To the right of the drop-down menu is the “change” button. Choose your wanted position in the menu and press “change” to access available content on a specific satellite position.

### **New list**

To create a favourite list, point and click on “New list”. The area will show up in white when active. To name or change name to a list, point and click on “Change current list name”. Type in a name in the space over the old name. The name must be longer than three and shorter than 20 characters. To delete a list, simply point and click on “Delete current list”.

### **Copy selected channels**

Now it’s time to start adding favourite channels to your favourite list. Put a mark in the box to the left of the channel name; you may mark more than one channel at the time. When you are ready, click on the “Copy selected channels to...” to transfer selected channels over to your list.



An encrypted channel in your favourite list is indicated by a padlock icon, which means you must pay to have the broadcast decrypted for viewing.



This indicates that a channel has LyngSat Guide information.



An HD channel is indicated by a HD icon.



The delete function lets you erase a channel from your favourite list.



Use the up and/or down arrows to change the channel position within your favourite list.

## **Get the favourite lists in your LyngBox.**

When you have created your favourite lists with the new tool the lists will automatically be downloaded to your LyngBox.

If your lists do not appear in your Active channel lists you might need to do a LyngSat Network download (network Setting) or just simply turn the box off and then on again.